



WIRING INSTRUCTIONS

IMPORTANT!

Before the power supply is switched on,
set the wiring correctly.

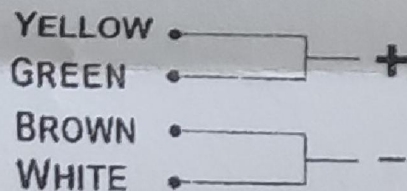


12 VDC

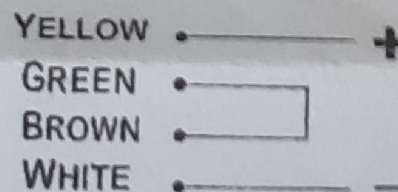


24 VDC


REED SENSOR CONTACT

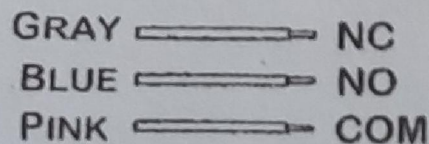


CRIMP NUT (POP NUT) INSTALLATION DIAGRAM

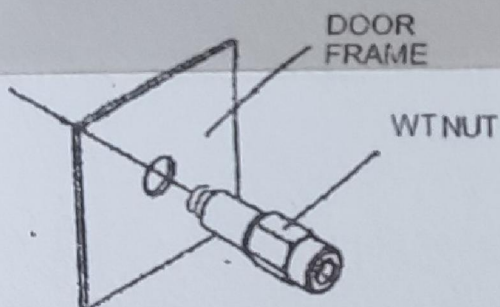


1. Drill Ø9.4 hole and
insert the M6 Crimp Nut
(Pop Nut) with WT Nut.

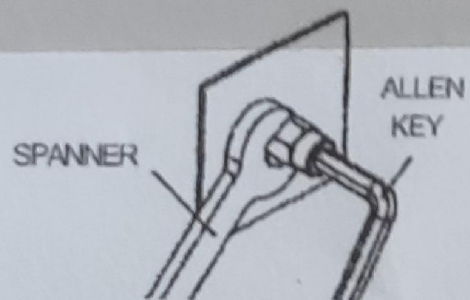

2. Use the allen key with spanner
and slowly tighten the Crimp Nut
(Pop Nut). Remove the WT Nut
after install.

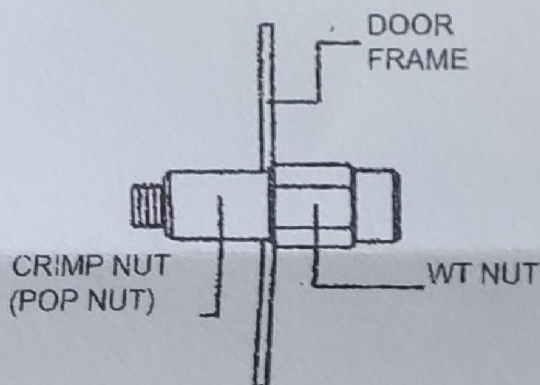

Before

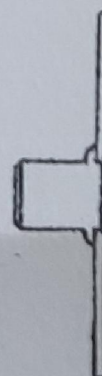

After