



Step 1

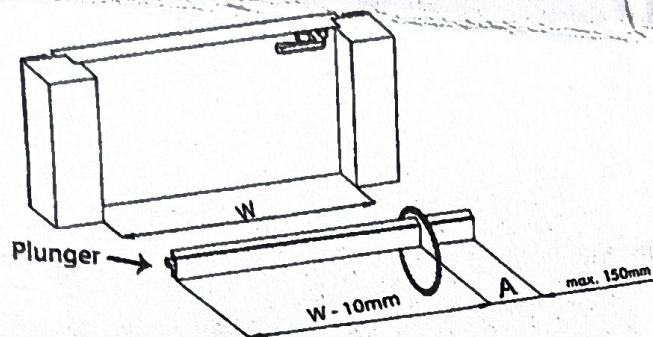


- Measure Total door width (W).
- Deduct 10mm from the door width ($W - 10\text{mm}$).
- Cut Concealex profile to length ($W - 10\text{mm}$) ensuring the cut is from the opposite end to the plunger (A). *

Step 2

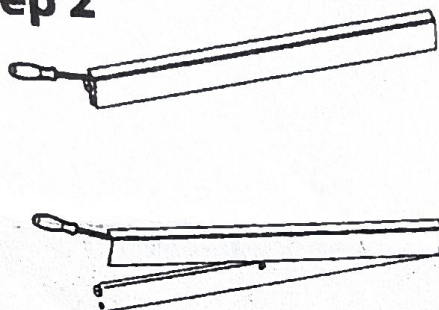


- Remove cover plate as indicated

Step 3

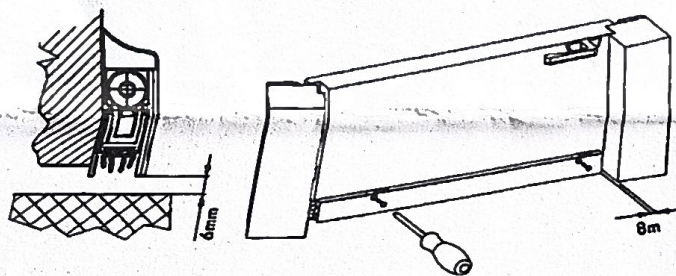


- Fix Concealex to the door using the screws provided, ensuring the gap from bottom of Concealex to floor is a minimum of 6mm as per diagram.

Step 4

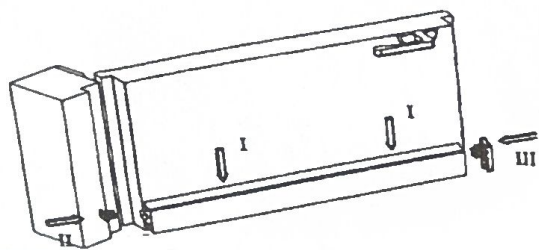

- Click cover plate into place, then fit endcap as indicated.

Step 5

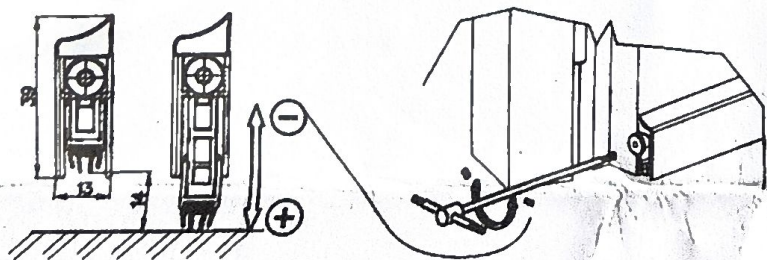

- Make adjustments using allen key provided to suit under door gap.

*Note: If purchased length is less than 430mm the max cut can be 50mm ($A = 50\text{mm}$)
If purchased length is greater than 430mm then the max cut can be 150mm ($A = 150\text{mm}$)