FLOOR MOUNTED DOORSTOP INSTALLATION GUIDE

CARLISLE BRASS

Incorrectly installing this product will negatively impact function and lifespan. If you are unsure please contact a professional. Drawings not to scale unless otherwise specified.

Pedestal Doorstop Installation:

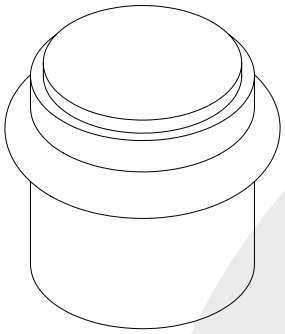

1. Unscrew the top cap from the main doorstop turning anticlockwise.
2. Position the product on the floor in the desired location.
3. Mark the screw hole position.
   Hint: If installing on a tiled surface, to prevent drill wandering apply mask ing tape to the wall before marking the fixing hole
4. Drill the fixing hole using a suitable drill bit. Insert wall plug if installing to tiled surface.
5. Position the doorstop on the floor and locate the drilled hole.
6. Insert the screw and tighten until firmly secured to the floor.
7. Screw the top cap back onto the doorstop ensuring it's firmly secure.

Oval Doorstop Installation:

1. Position doorstop on the floor in the desired location. Check the door meets contact with the rubber buffer.
2. Mark the screw hole positions and locating/base pin hole (if featured).
   Hint: If installing on a tiled surface, to prevent drill wandering apply masking tape to the wall before marking the fixing hole.
3. Drill the fixing holes using a suitable drill bit. Insert plug if install ing into tiled surface.
4. Screw locatin pin clockwise into the base.
5. Position the doorstop on the floor and locate the drilled holes.
6. Insert the screw and tighten until firmly secured to the floor.

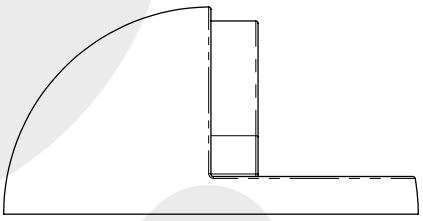

Note: Ensure no underfloor services, pipes, or electrical cables are present before drilling.